

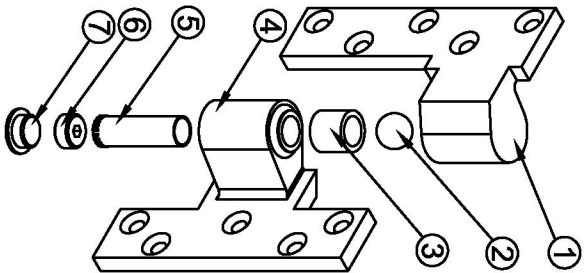


019 INTERMEDIATE PIVOT 3/4" OFFSET

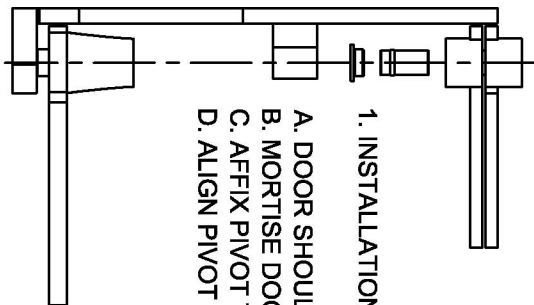


ITEM NO.	QTY.	PART NO.
1	1	019 Door Leaf
2	1	019 Alignment Ball
3	1	019 Needle Bearing
4	1	019 Jamb Leaf
5	1	019 Pivot Pin
6	1	019 Retainer Screw
7	1	019 End Cap

IF BOTTOM ARM IS FOR 0117 PIVOT,
MAKE SURE THE ARM IS SITTING
ALL THE WAY DOWN ON THE BASE.
MAKE NO ADJUSTMENT TO THE 019.

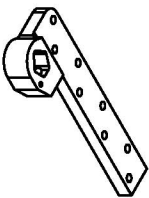


1. INSTALLATION INSTRUCTIONS


- A. DOOR SHOULD ALREADY BE HUNG W/ TOP PIVOT & BOTTOM PIVOT (OR FLOOR CLOSER).
- B. MORTISE DOOR & FRAME PER TEMPLATE ON REVERSE SIDE.
- C. AFFIX PIVOT TO DOOR & FRAME.
- D. ALIGN PIVOT POINT FROM TOP PIVOT TO BOTTOM ARM. (SEE DIAGRAM)

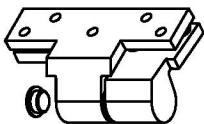


E. REMOVE END CAP (ITEM #7)

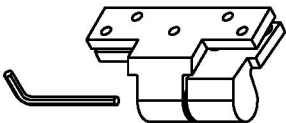

F. TURN RETAINER SCREW (ITEM #6)
CLOCKWISE. RAISE THE DOOR
TO THE DESIRED HEIGHT.

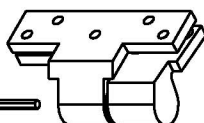

G. TURN RETAINER SCREW (ITEM #6)
COUNTERCLOCKWISE TO LOWER DOOR.

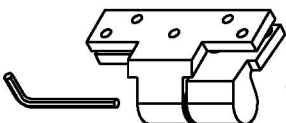

H. TIGHTEN RETAINER SCREW (ITEM #6)
UNTIL YOU FEEL RESISTANCE.
REPLACE END CAP (ITEM #7).