



L0147 PIVOT SET 3/4" OFFSET FOR LEAD LINED DOORS 1-3/4"

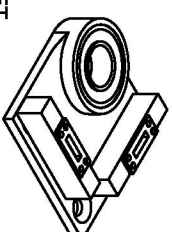


2. SET PIVOT SET


- PREPARE FLOOR TO RECEIVE FLOOR PORTION. SET ANCHORS PROVIDED SECURELY IN FLOOR.
- IMPORTANT: FLOOR PORTION MUST BE LEVEL. LEVEL IN BOTH DIRECTIONS PER ILLUSTRATION.
- FLOOR PORTION SHOULD BE PARALLEL WITH CENTERLINE OF DOOR.

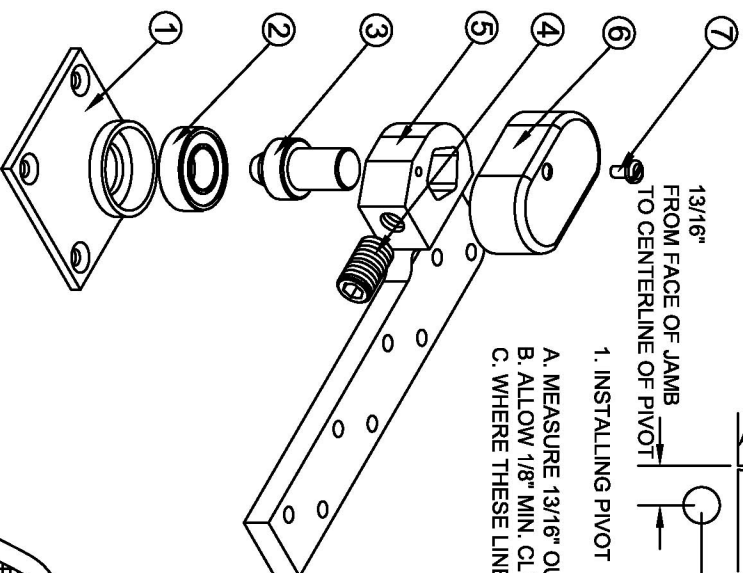

- MEASURE 13/16" OUT FROM DOOR JAMB.
- ALLOW 1/8" MIN. CLEARANCE FROM DOOR STOP TO DOOR FACE.
- WHERE THESE LINES INTERSECT DETERMINES THE CENTERLINE OF THE PIVOT.

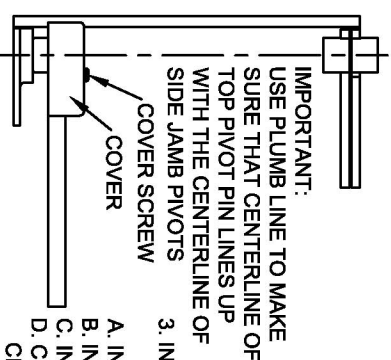


- INSTALL TOP PIVOT IN DOOR PER TEMPLATE
- INSTALL TOP PIVOT IN FRAME PER TEMPLATE.
- CENTERLINE OF TOP PIVOT SHOULD LINE UP WITH CENTERLINE OF PIVOT ARM. (USE PLUMB LINE AS ILLUSTRATED)
- IF SIDE JAMB PIVOT IS USED, SEE REQUIRED TEMPLATE.

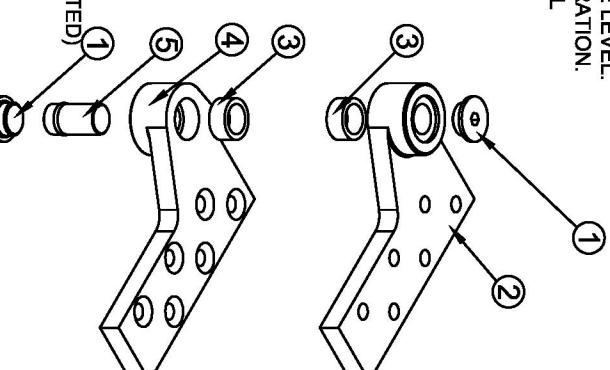

4. HANG DOOR

- SET DOOR ON PIVOT SET SPINDLE
- PUSH TOP PIVOT PIN IN PLACE AND TIGHTEN L0180 END CAP. (ITEM #1)
- IF DOOR DRAGS AT FLOOR (OR THRESHOLD, IF USED) LOOSEN ARM LOCKING SCREW AND RAISE DOOR TO DESIRED CLEARANCE AND INSERT ONE OR MORE 1/16" THICK SHIMS. RETIGHTEN ARM LOCKING SCREW SECURELY
- PUT ARM COVER (ITEM #6) ON AND SECURE TIGHTLY WITH COVER SCREW (ITEM #7).

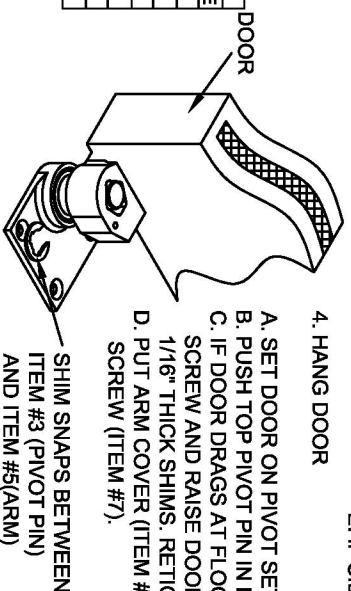

SHIM SNAPS BETWEEN
ITEM #3 (PIVOT PIN)
AND ITEM #5 (ARM)