



**NOTE - Template may not be true-to-size.
Please use for reference purposes only.
DO NOT drill until measurements are verified.**

041 MORTISE DEADLOCK

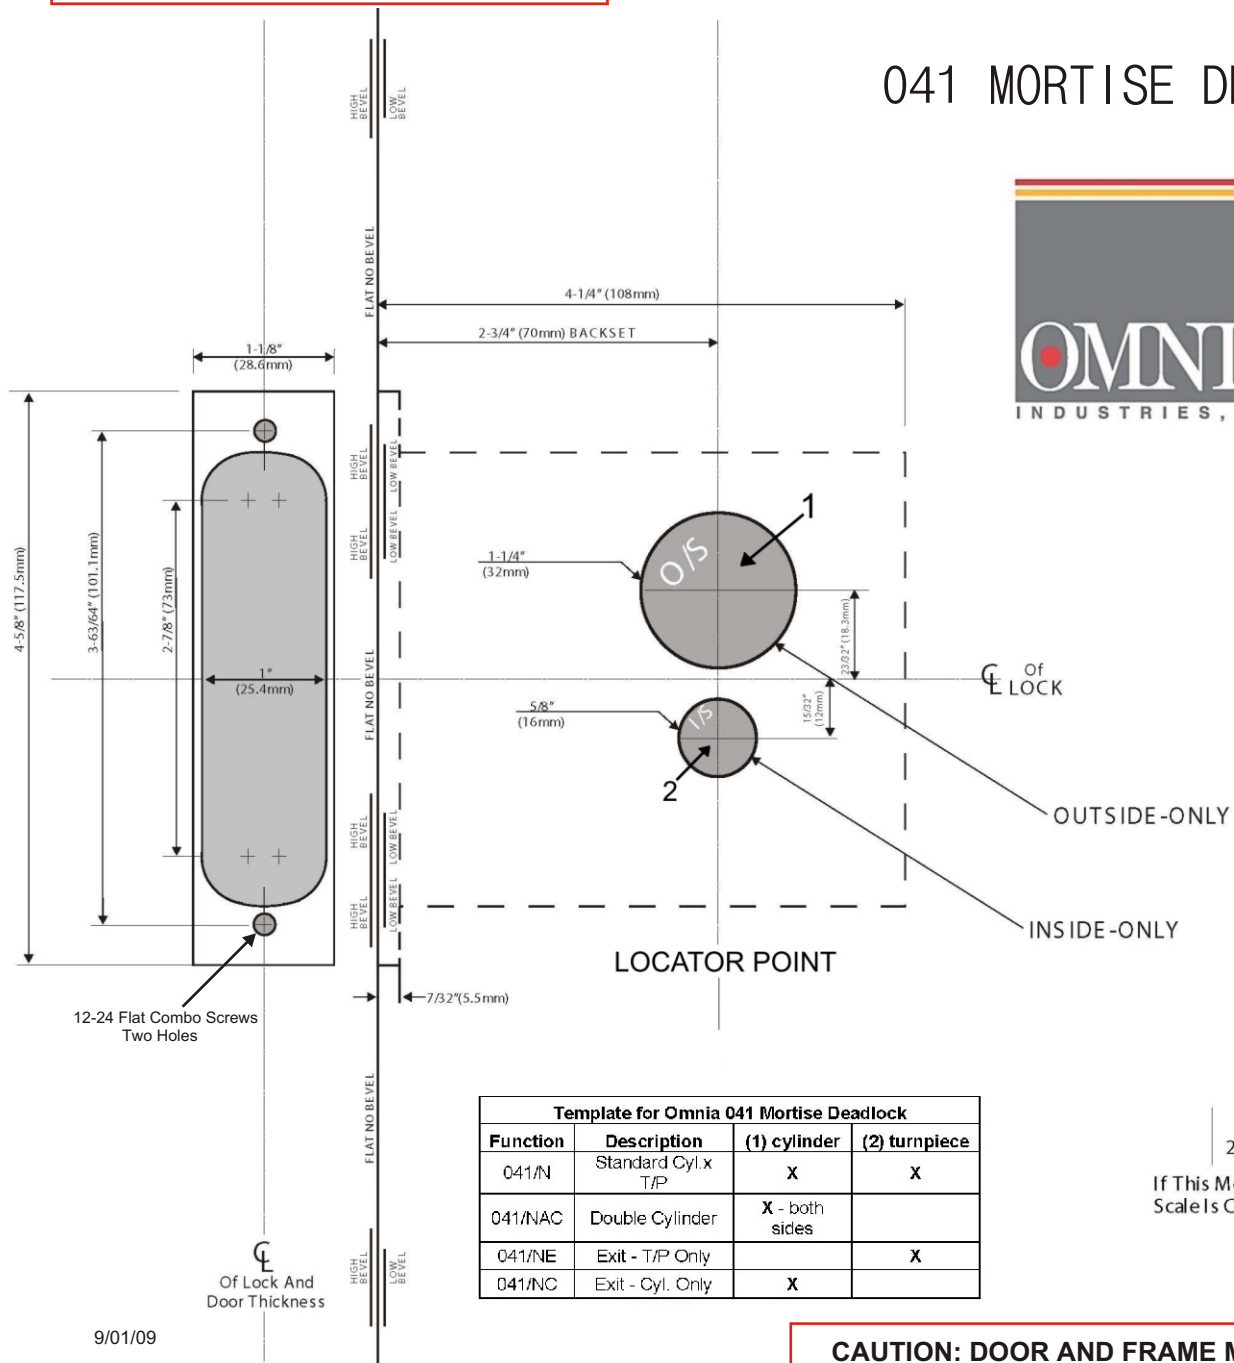

Template for Omnia 041 Mortise Deadlock			
Function	Description	(1) cylinder	(2) turnpiece
041/N	Standard Cyl. x T/P	X	X
041/NAC	Double Cylinder	X - both sides	
041/NE	Exit - T/P Only		X
041/NC	Exit - Cyl. Only	X	

HEAVY DUTY
DEADBOLT

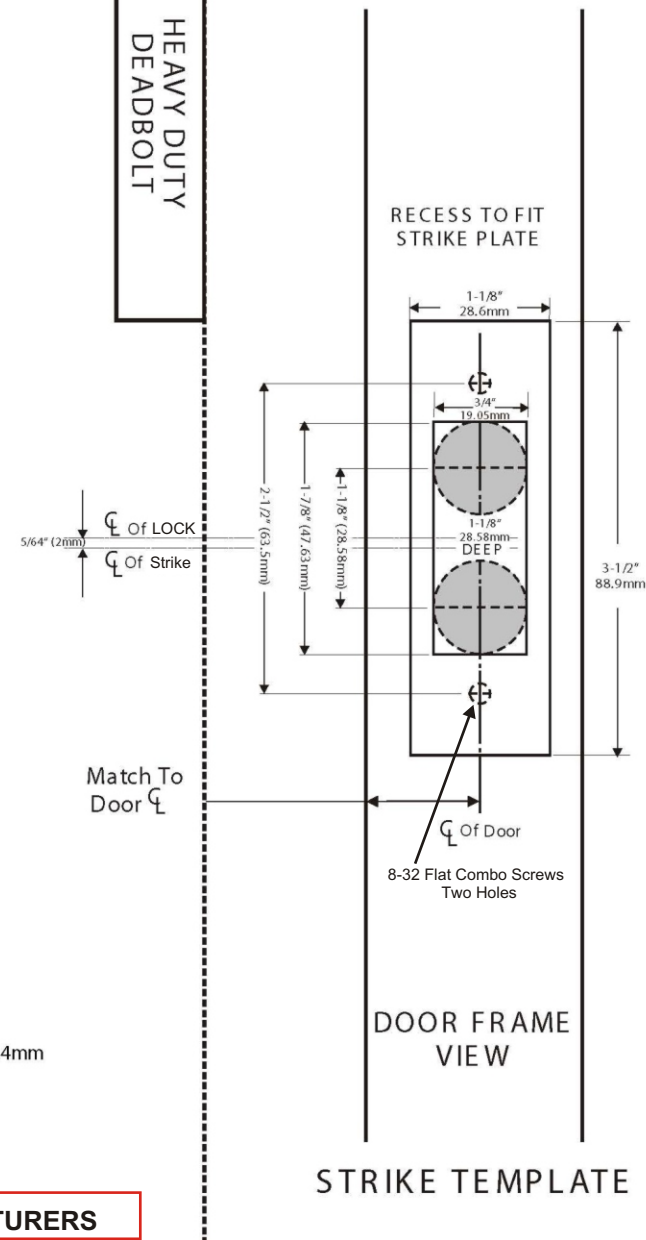

STRIKE TEMPLATE

CAUTION: DOOR AND FRAME MANUFACTURERS

When door gasketing or silencers are used, proper allowances must be made for strike location to maintain a common centerline with lock and door so that the bolt will freely enter strike.